

CorrectCraft 2007

Troubleshooting (Electronic Throttle Engines)

System Not Controlling/Surging in both RPM & Speed Mode


You can quickly perform a “**Control Test**” to confirm whether PerfectPass has proper control of the ECM. This test is on Page 3 and can be done on a “fake lake” or in the water.

The **PerfectPass “Drive by Wire” (DBW)** system for new electronic throttle engines results in a simplified and enhanced version of PerfectPass. From the drivers seat, PerfectPass operation is virtually identical to the present mechanical systems. PerfectPass is now comprised of just three main parts on S.E. Boats only:

1. DBW Master Control Module
2. DBW Plug & Play Engine Wiring Harness
3. In-Dash Display

Servo motors, throttle cables, etc. are not required on these engines.

On Limited models, PerfectPass software resides on the Faria “Gateway”. PerfectPass only supplies a dash display.

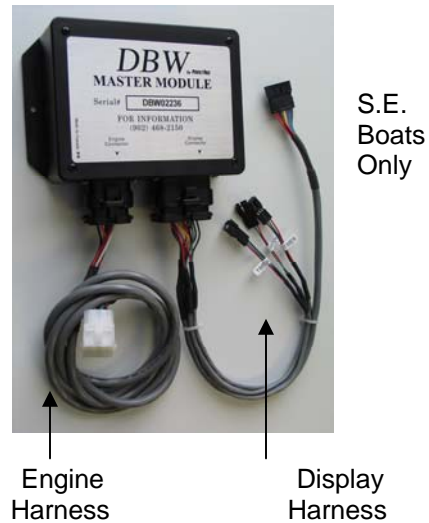

How it Operates:

The ECM of an electronic throttle engine allows an external device such as PerfectPass to control the engine rpm using the throttle servo motor when all control signals are valid and manual throttle lever position exceeds the rpm level request of PerfectPass.


Just three individual wires in the PerfectPass DBW wiring harness connect the speed control to the engine ECM.

1. The **Request Line** from PerfectPass requests the ECM to allow PerfectPass to take control.
2. The **Status Line** from the ECM indicates PerfectPass now has control of the engine. The Status Line is the signal that confirms engagement (beeper) and system control.
3. The **VGOV Line** establishes the engine RPM level as set by PerfectPass.


Problems with PerfectPass should be rare given the few components that now make up the system. Most troubleshooting will simply involve voltage/continuity testing on the PerfectPass engine harness.

Wiring Identification (S.E. Boats Only)

S.E. DBW Engine Harness

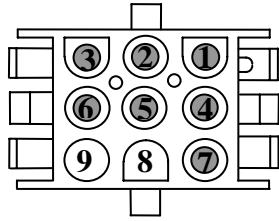

9-Pin MATE-N-LOK
(White)
Front View
Connected to
CorrectCraft Harness

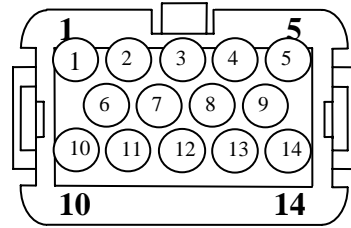


14-Pin AMPSEAL
(Black)
Back View
Connected to
PerfectPass Module

Signal	Color	9-Pin MATE-N- LOK	14-Pin AMP Seal	Deutsch 20-Pin Connector at Engine
STAT	Orange	1	1	11
VGOV	Blue	2	10	15
RQST	Brown	3	12	4
Ground	Black	4	14	13
RPM	White	5	9	14
Speed	Green	6	8	5
12 Volts	Red	7	4	

Wiring Identification (Limited - Team Edition Only)

2006 CorrectCraft DBW Engine Harness

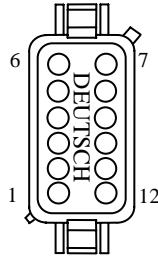

12-Pin DEUTSCH
(Tan/Orange)
Back View
Connected to Faria
Gateway Module

Signal	Color	12-Pin DEUTSCH Connector	ECM
STAT	Orange	8	J1-9
VGOV	Blue/Black	6	J2-4
RQST	Brown	7	J1-21
Ground	Black	5	ECM Ground
RPM	Grey	4	J1-14
Throttle F/B	White	9	

Problems with PerfectPass Controlling / Not Controlling

Open circuit (bad connection/broken wire) symptoms of a PerfectPass DBW system


Problem #1 RQST Line Open – PerfectPass never takes control in any mode, the engine is controlled only by the manual throttle handle.

Problem #2 VGOV Line Open (RQST Line OK) – With the PerfectPass system control ON, the engine will not go above idle no matter how far the manual throttle is pushed. With PerfectPass control OFF, the engine is controlled as normal by manual throttle handle.

Problem #3 STAT Line Open (RQST Line and VGOV Lines OK) – Engine operates normally with PerfectPass control ON, the engine RPM's become limited at speed slightly above system set point, but there is no proper control and speed remains one or two mph above setpoint. The PerfectPass does not beep to acknowledge engagement and the underline characters never appear.

TESTING (CONTROL TEST)

To enter the Test Mode, press the Menu & UP Keys together and scroll down to Device Test. Rope Test will first appear, press menu to enter Servo/Control Test.

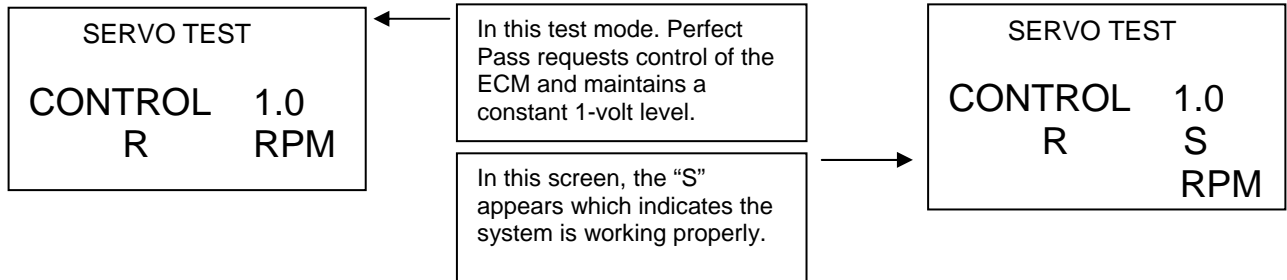

TEST

With engine ON, lock the gearshift in neutral and advance the throttle handle to 1700 RPM. When all is working correctly an "S" will appear next to the "R" and the engine will hold at approximately 1400 RPM. If the RPM is holding at 1400 but the "S" is not on the display, there is a problem with the "STAT" line. Pressing the UP Key will change the output voltage by 0.1 volt as shown on the display and the RPM will increase by 140 RPM for each 0.1 volt increase.

If the RPM does not hold at 1400 the "RQST" line may not be connected. Either the Request Line or the VGOV Line has lost continuity.

If the engine holds RPM at approximately 1400, but the S does not appear on screen, then check continuity of the Status Line.

Voltage Testing (Control Test Mode)

- Measure the voltage on the RQST (request line) which should measure less than 1 volt. (0 to 1 volt) Engine running or not running.
- Measure voltage on VGOV (vgov line) which should measure about 1 volt. (.8 to 1.2 volts) Engine running or not running.
- Measure voltage on STAT (stat line) which will be 10+ volts when **S** is not on display. (When engaged and working properly this voltage will be less than 1 volt as ECM grounds the line.) Engine must be running for any measurement on STAT line.
- Press the OFF key and the "R" will disappear. Now measure voltage on RQST wire again which should now measure more than 4.5 volts, this confirms proper operation of PerfectPass Request driver and ECM connection.

Trouble Shooting DBW

Problem – System shows rpm & speed on Display, but does not engage & take control.

Check- Perform Open Circuit tests #1 - #3 as described on previous page.

Problem – No speed reading on PerfectPass Display / Very Low Speed Reading

Check – Paddle wheel signal on pin 2 of P14 Gateway Connector. If paddle is spun slowly, you should see 0 volts / 12 volts as wheel slowly turns. As wheel is spun quickly, you will see an average of 6 volts . (If voltage is good, perform a “System Reset”).

Problem – No rpm reading on PerfectPass display

Check – The RPM signal wire at grey wire Pin 4 of P11 connector coming into the Gateway module. With engine off you should see about 9 volts. (With engine running, you should see a normal tach pulse signal) If no signal, check the pin at ECM.

Problem – PerfectPass in Wakeboard mode is set at 22 mph and digital speedometer shows 22, but actual speed is 24.

Check – Press menu and highlight menu arrow icon, Press DOWN Key to access “Speedo Calibrate” and quickly press down key several times and lower speed by 2 mph. All Wakeboard speeds now calibrated.

Problem – Key is on, but PerfectPass screen does not become active and show data.

Check – PerfectPass requires 12+ volts for start up. Check voltage on purple wire (12 v) power source to Gateway unit – Pin 3 of P2.

Check screen contrast – Press Menu & UP Keys together, then press UP Key a couple of times. Does data re-appear?

Problem – Button on PerfectPass Display does not work.

Check - If system was just installed, unplug Display from harness and inspect all brass pins on connector to ensure they are inline. If problem occurs after much use, the Display will require repairs by PerfectPass.

Problem - System not smooth in RPM Mode.

Check – Confirm whether the correct engine selection was made on initial set up. Press Menu & Up keys together. Menu to “System Information”. It will show either [EXC / 5.7] or [6.0 / 8.1] If it was selected incorrectly, do a System Reset and select properly.

Problem – In Wakeboard mode, system sluggish or exhibits some surging.

Check – Inspect paddle wheel. If paddle appears OK, go into adjustable parameters by highlighting menu arrow icon and press UP Key. Once Wakeboard is highlighted, press DOWN for “System Settings”.

KDW will appear. This value represents how firm the system will control. Heavily loaded boats may need higher settings. (Typical values 60 – 200) Press Menu to proceed.

NNW will appear. This is the filter factor of paddle. The higher the value, the more filtering is done prior to making a speed change. (Typical values 80 – 180).

Software Adjustments

System Reset – To reset the entire system back to original factory values, press & hold ON/OFF & MENU Keys together as you turn key on to power PerfectPass. Continue holding for a few seconds until [System Reset ^ = Yes] appears. Then simply answer questions as they appear.

Switching WakeboardPro <> DigitalPro – If your system was selected incorrectly, perform a system reset. As you proceed through this process, you will be asked [Wakeboard Only ^ = YES]. Answer YES for WakeboardPro, and NO for DigitalPro.

Engine Selection – On initial start up or during a system reset, PerfectPass will ask if you have a standard 5.7 litre engine. This will appear as [EXC / 5.7 ^ = Yes] This means press UP for 5.7 and DOWN for Big Block 6L or 8.1L. To confirm if correct engine was selected, press Menu & Up Keys together to get into back ground screen and go to “**System Settings**”. Following battery voltage, etc you will see which engine was selected. If incorrect, perform a system reset.

(An incorrectly selected engine can cause unsettled control in rpm mode only)

WakeboardPro to DigitalPro – The Master Module for both systems are identical. The only difference is in the way they were initialized, i.e. as a DigitalPro or WakeboardPro. You can change the way it was set by performing a system reset.

